





NOVALINE - SEMI RECESSED







THORN

Installation instructions Installationsanvisning
Instructions de montage Istruzioni di montaggio
Montageanweisung Asennusohje



AT13118-C

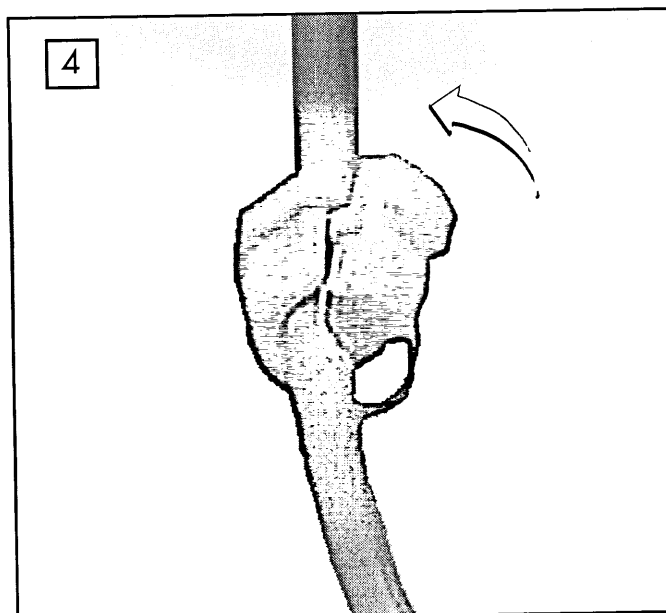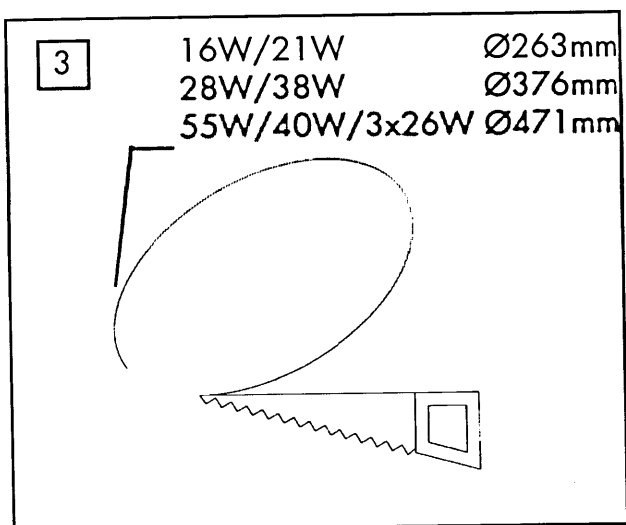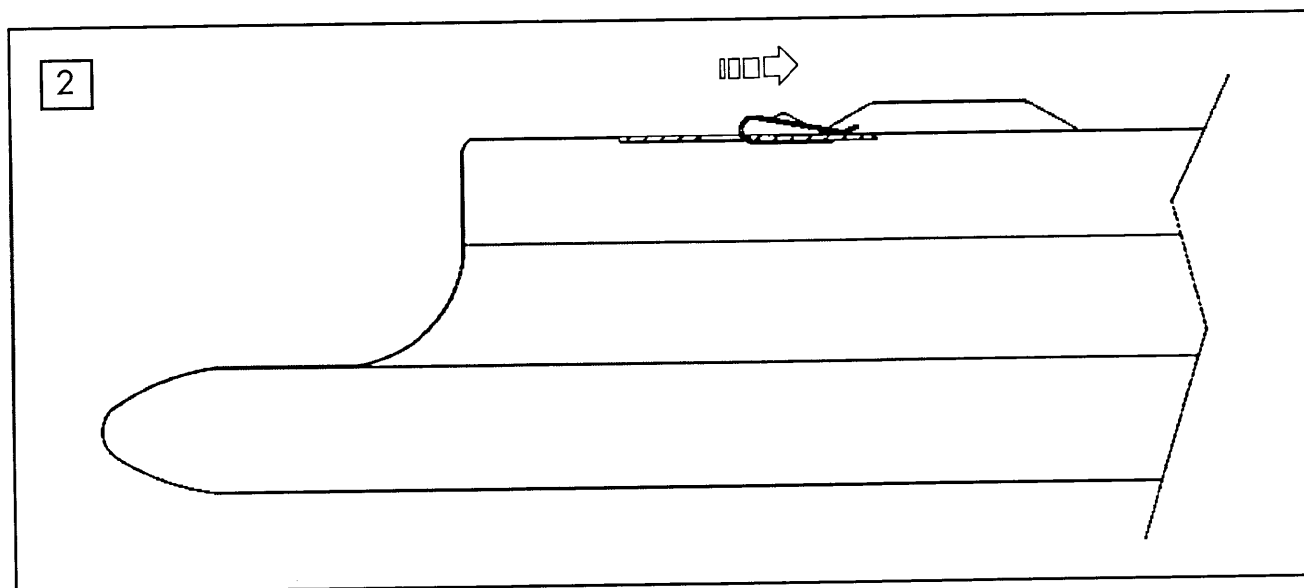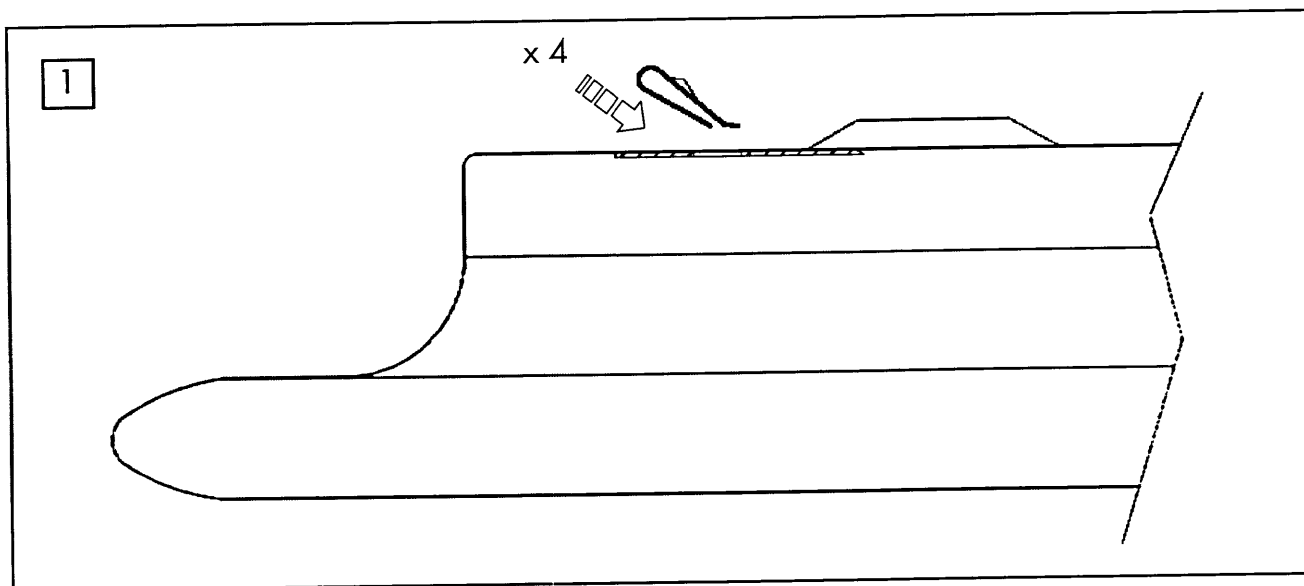

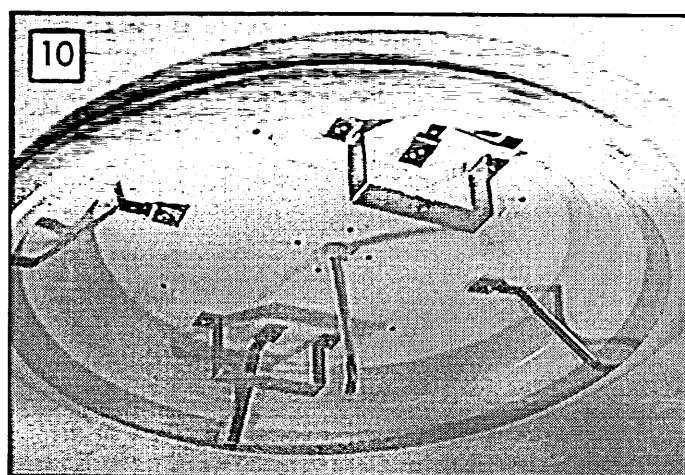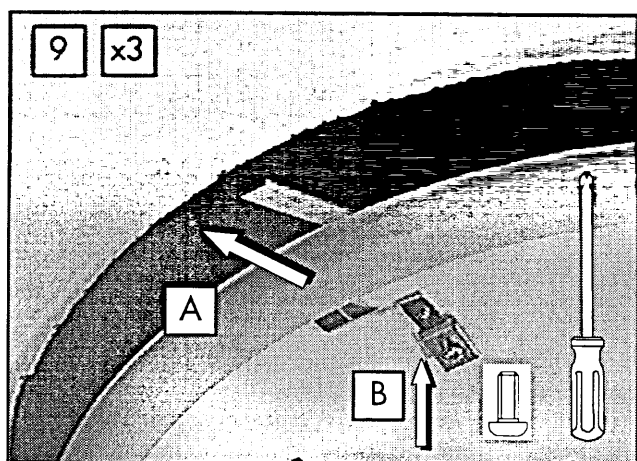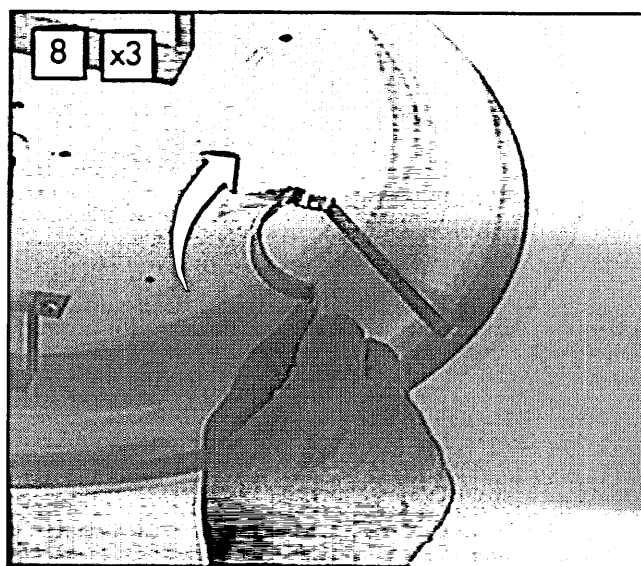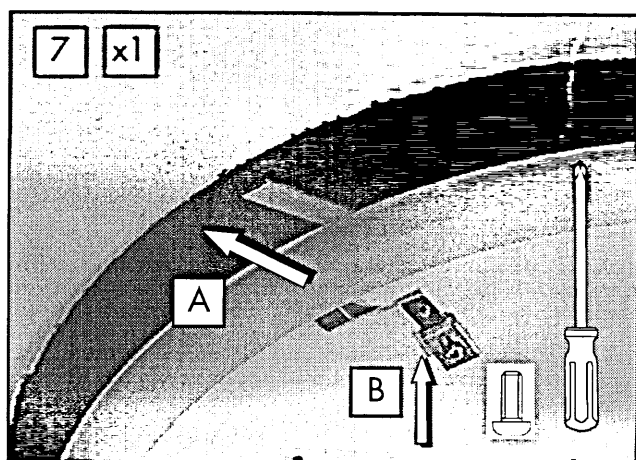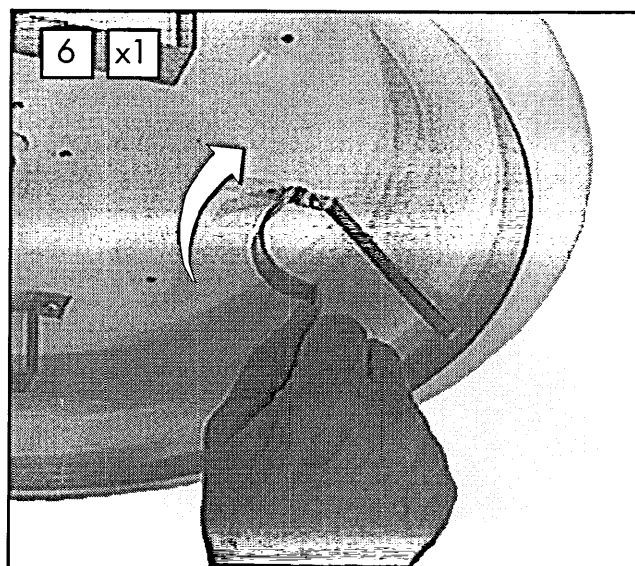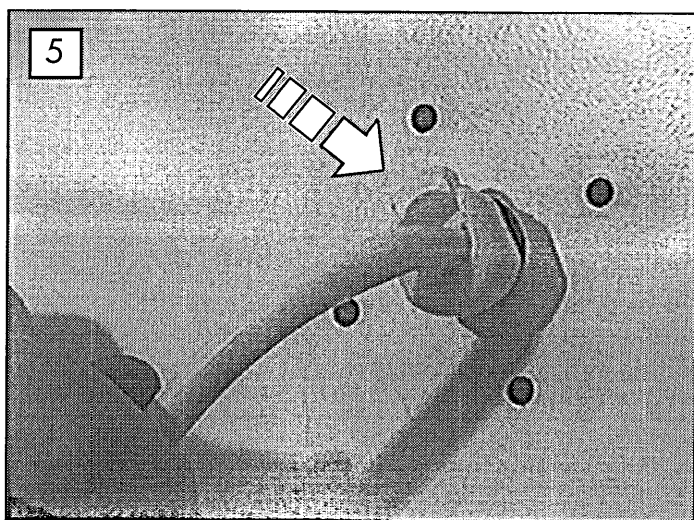

WARNING - Under no circumstances should this luminaire be covered in insulation material.
 This luminaire must be earthed.
 ATTENTION - En aucune circonstance, ce luminaire ne doit être recouvert de matériel isolant.
 S'assurer du raccordement du luminaire à la terre.
 ACHTUNG - Unter gar keinen umständen muß diese leuchte mit Isolierungsmaterial gedeckt werden.
 Leuchte muß geerdet werden!

WARNING - Armaturen får ej övertakas med isoleringsmaterial.
 Armaturen måste vara jordad.
 ATTENZIONE - In nessuna circostanza questo apparecchio deve essere coperto da materiale isolante.
 Questo apparecchio deve essere messo a terre.
 VAROITUS - Valaisinta ci saa missään olosubteissa peittää cristävillä materiaaleilla.
 Huom valaisin on maadoitettava.